 


下④#22	下③#63	下②#72	下①#71	負荷名称	上④#22	上③#63	上②#72	上①#71
76	75	74	73	DMX	72	71	70	69


UH

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	回路番号
68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	DMX



B-SUS
※1・16は直調切替可

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	回路番号
52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	DMX

 


SL-2
※1・16は直調切替可

中④	中③	中②	中①	負荷名称	上下④	上下③	上下②	上下①
16	19	18	17	DMX	16	15	14	13

2Bo

※1作業灯/2#W/3#72/4#78

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	回路番号
36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	DMX

 


SL-1
※1・16は直調切替可

中④	中③	中②	中①	負荷名称	上下④	上下③	上下②	上下①
12	11	10	9	DMX	8	7	6	5


1Bo

※1作業灯/2#W/3#72/4#78

8	7	6	5	回路番号
130	129	128	127	DMX

 


4	3	2	1	回路番号
126	125	124	123	DMX


 


PS 上・下
※1・8は直調切替可


4 3 2 1 0 1 2 3 4

名古屋市公会堂ステージ回路図

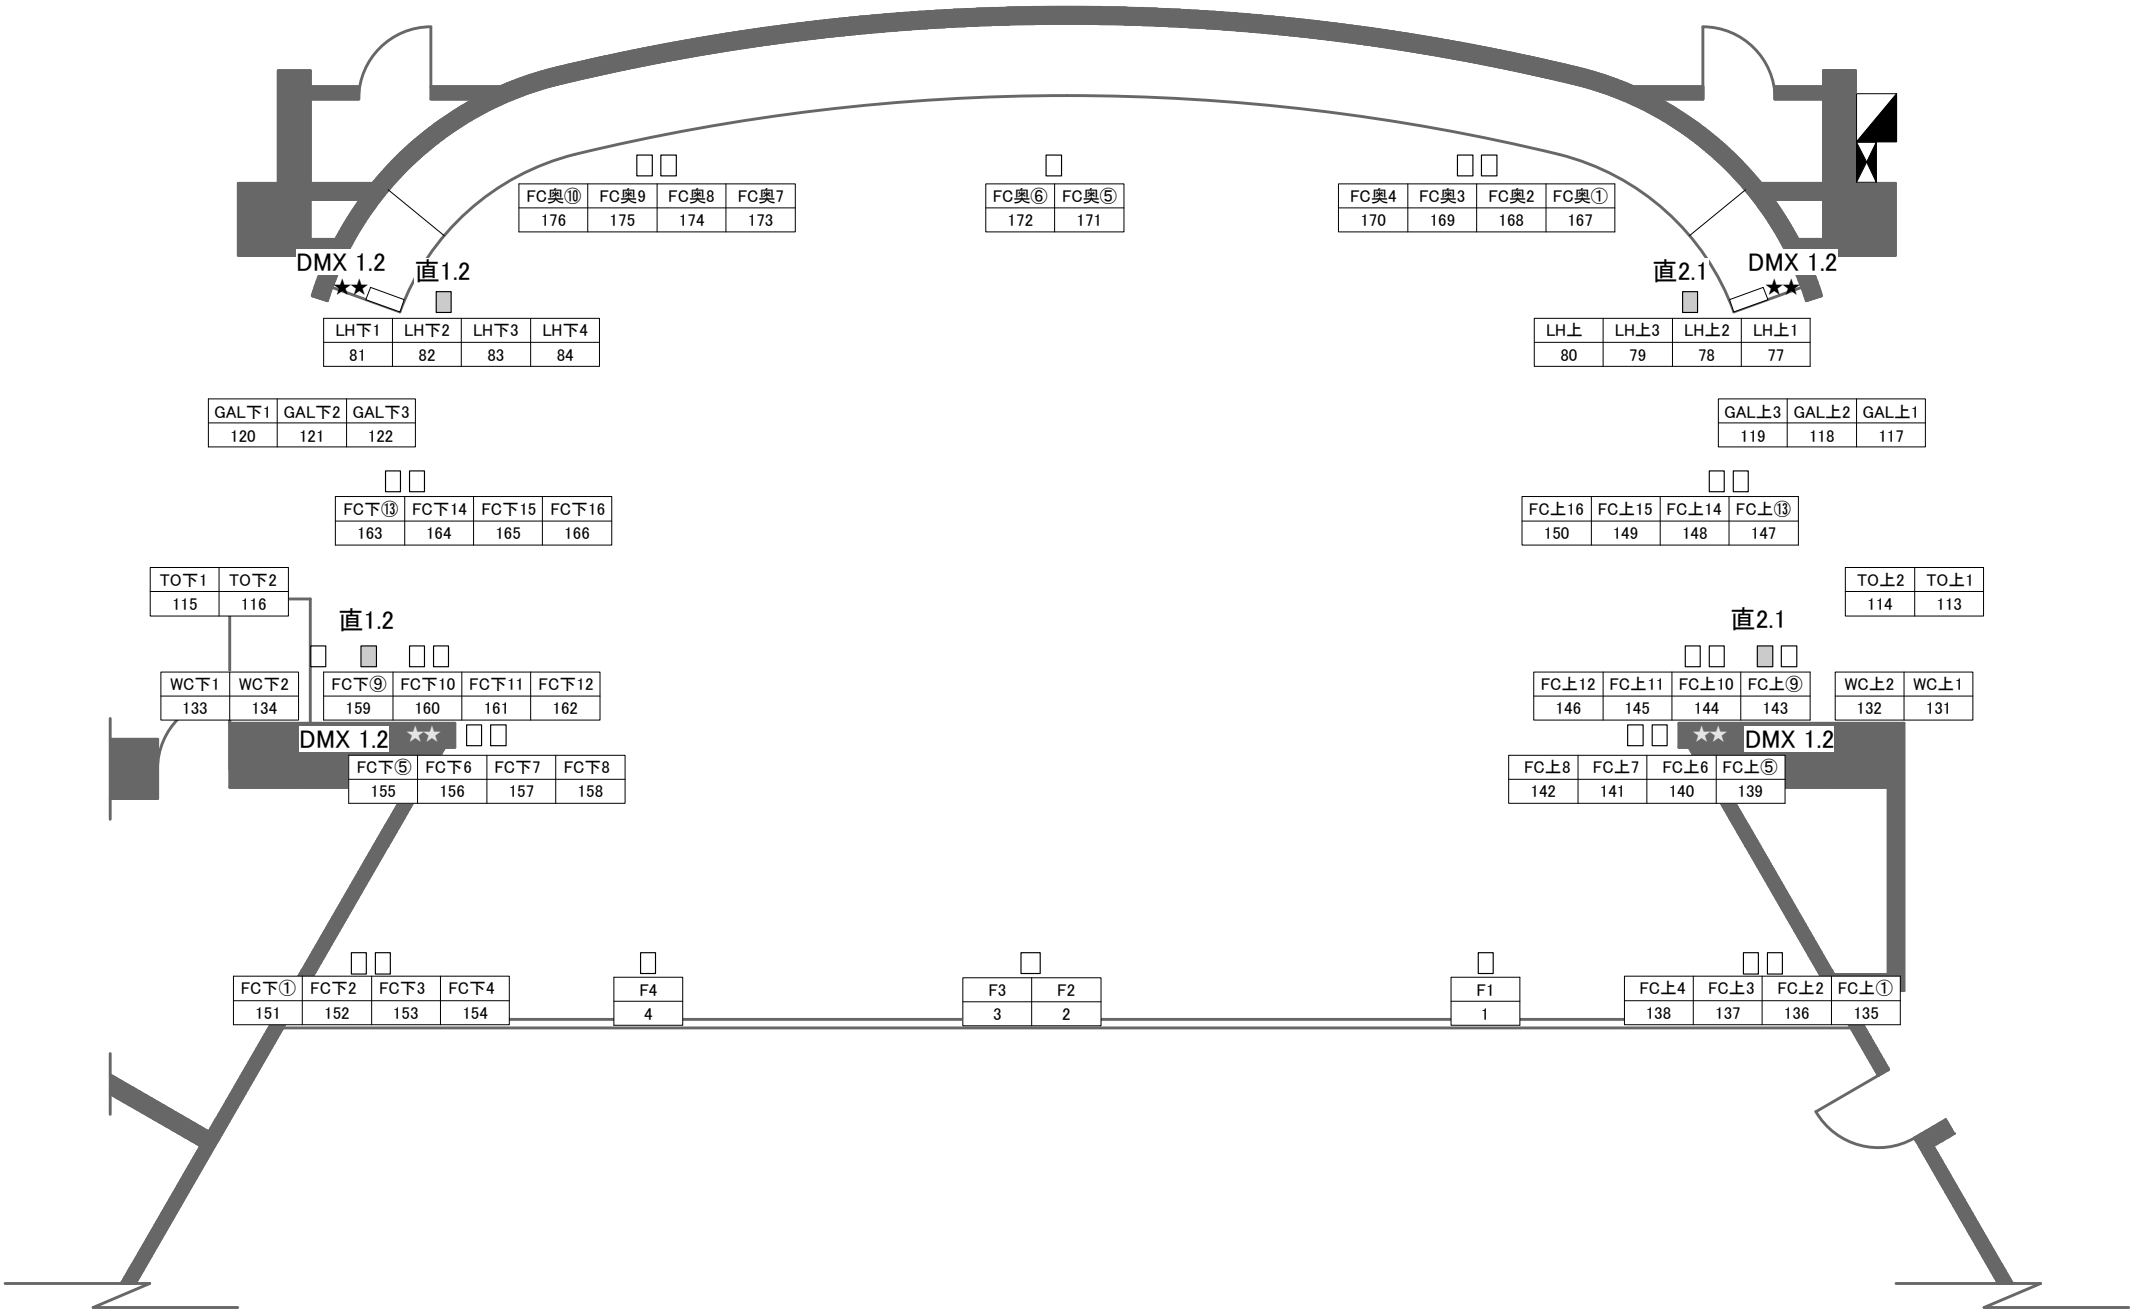

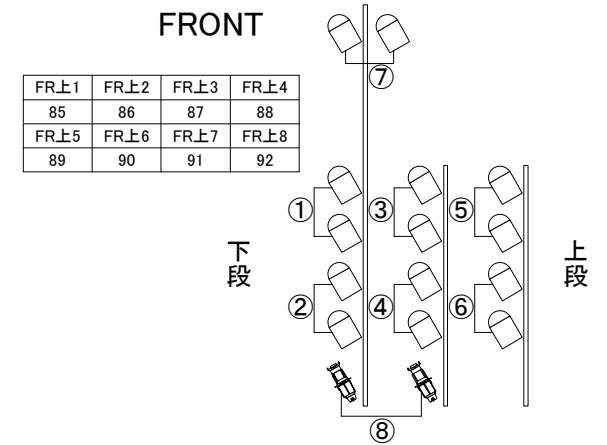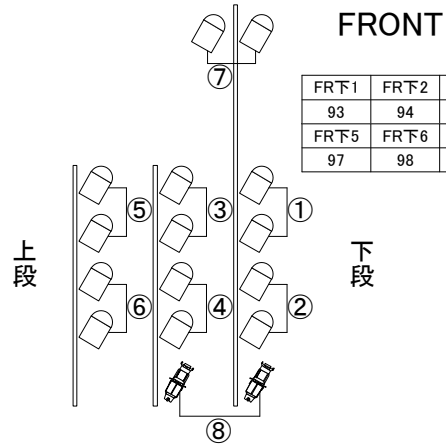


1CEILING

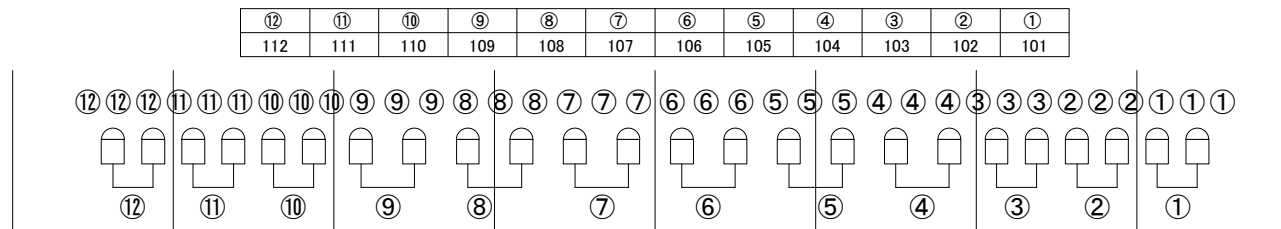

2CEILING

※●白抜き数字は未使用回路です

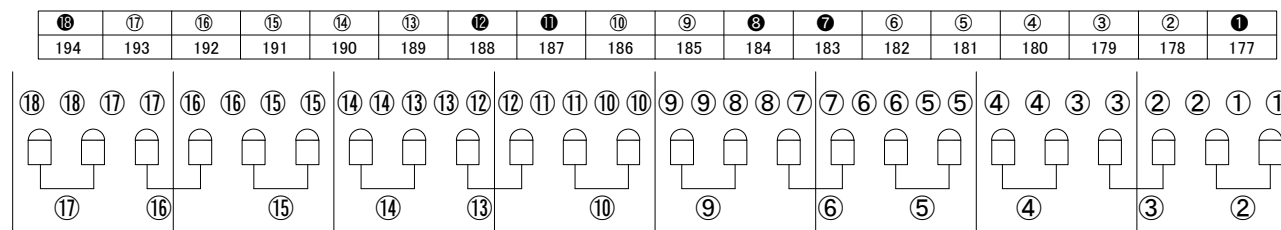



④ DMX 204

③ DMX 203

1F

② DMX 202

① DMX 201



3F


⑨⑩千鳥
DMX 209/210



軒下1F前 この字で⑪⑬千鳥
DMX 211/213



軒下1F奥 ⑫⑭千鳥
DMX 212/214

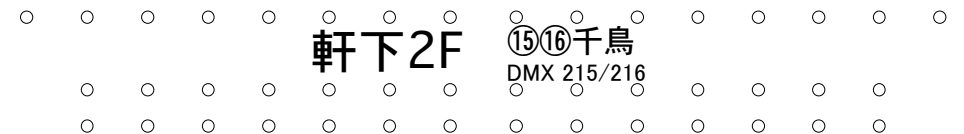

軒下2F ⑮⑯千鳥
DMX 215/216